

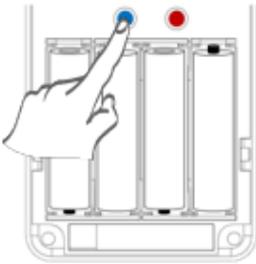
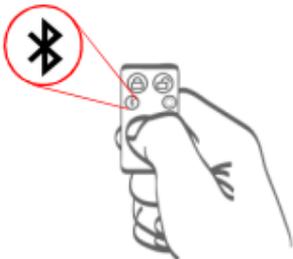
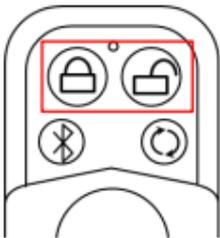


# **uLock<sup>®</sup>**

## **Quick Guide**

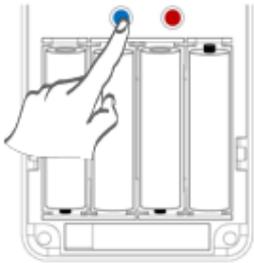
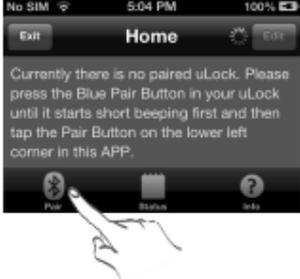
## Quick Guides

### uRemote User

Step	Diagram	Instruction
Press uLock Pair button		<ol style="list-style-type: none"> <li>1. Press and hold the "Blue" Pair button.</li> <li>2. When you hear continuous short beeps, uLock is in the Pairing mode.</li> </ol>
Press uRemote Pair button		<ol style="list-style-type: none"> <li>3. Press and hold the Pair button until you see the blinking blue light.</li> <li>4. When uLock makes a 5-second long beep, the Pairing process has succeeded.</li> <li>5. Press the "Blue" Pair button in the uLock to stop its pairing mode and beeping sound.</li> </ol>
Operate uLock		<ol style="list-style-type: none"> <li>6. You can now operate uLock with the uRemote.</li> </ol>

### AWDL Application User

Step	Diagram	Instruction
Download and install AWDL		<ol style="list-style-type: none"> <li>1. Visit the App Store or Google Play to download and install AWDL.</li> <li>2. Tap the Icon after installing to enter the AWDL App Home page.</li> </ol>

<p>Press uLock Pair button</p>		<p>3. Press and hold the “Blue” Pair button. 4. When you hear continuous short beeps, uLock is in the Pairing mode.</p>
<p>Tap Pair Icon</p>		<p>5. Tap the Pair Icon on the lower left corner, the App will begin to search for the discoverable uLock.</p>
<p>Tap discovered uLock to finish Pairing process</p>		<p>6. Tap the discovered uLock. 7. When uLock makes a 5-second long beep, the Pairing process has succeeded. 8. Press the “Blue” Pair button in the uLock to stop its pairing mode and beeping sound.</p>
<p>Operate uLock</p>		<p>9. You can now operate uLock with your paired Smartphone or Tablet.</p>